

"Celing Cut-out Template" per model number. (Figure 7)

3, Attach the carabiner safety lanvard to secure place inside the ceiling.(Figure 8) 4. Remove the unction box faceplate. Disconnect wiring to existing ballast,


Remove appropriate knock out on junction box

5. Disconnect the connector between the terminal and the lamp. Connect incoming AC mains power to fixture input leads.Insert the downlight conduit into the J-box and wire to the power source (black to hot, white to neutral, violet to 0-10V dimming positive, gray to 0-10V dimming negative). Reattach the J-box cover when done. (The grounding of the overall system shall be done in accordance with NEC and local codes). Reconnect the connector and check that the light is working properly.(Figure 9&10) 6. Bend the spring clips upward so they are in an upright and insert downlight into hole in the ceiling / housing.(Figure 11)

7. Once downlight is inside the celing and housing, release the spring clips and push the fixture up into the celing unti securely fixedand fush with the celing (rotating the downlight may be necessary to properly engage the spring clips and ensure a secure ft). (Figure 12)

8. Restore power at the source. The installation is complete. (Figure 13)

## Pre-installation(A)

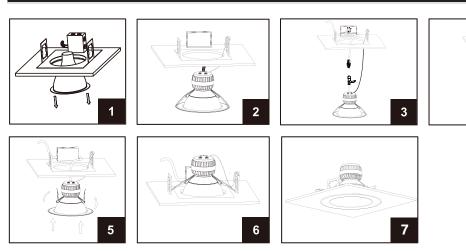

## WARNING: Make sure the POWER is TURNED OFF in which you are installing the product.

1. Remove existing lamp and reflector, lf existing trim or can are present, remove from the ceiling or move it out of the way, Make sure to retain existing rough-in kit components. (Figure 1)

2. Measure the ceiling opening and ensure the edge of the downlight retroft will cover the entire hole and sit firmly in the ceiling.

3. Attach the carabiner safety lanyard to the existing fixture housing. (Figure 2) 4. Remove the junction box faceplate. Disconnect wiring to existing ballast. Remove appropriate knock out on junction box.

5. Disconnect the connector between the terminal and the lamp.Connect incoming AC mains power to fixture input leads.Insert the downlight conduit into the J-box and wire to the power source (black to hot, white to neutral, violet to 0-10V dimming positive, gray to 0-10V dimming negative). Reattach the J-box cover when done. (The grounding of the overall system shall be done in accordance with NEC and local codes). Reconnect the connector and check that the light is working properly.(Figure 3&4) 6.Bend the spring clips upward so they are in an upright and insert downlight into hole in the ceiling / housing. (Figure 5)

7.Once downlight is inside the celing and housing, release the spring clips and push the fixture up into the ceiling until securely fixed and flush with the celling (rotating the downlight may be necessary to properly engage the spring clips and ensure a secure ft). (Figure 6)

8. Restore power at the source. The installation is complete. (Figure 7)

## New Construction Installation(B)

WARNING - RISK OF FIRE OR ELECTRIC SHOCK, NSTALL THIS KIT ONLY N THE LUMI-NAIRE THAT HAS THE CONSTRUCTIONFEATURES AND DIMENSIONS SHOWN IN THE PHOTOGRAPHS AND/OR DRAWINGS AND WHERE THE INPUT RATING OF THERETROFIT KIT DOES NOT EXCEED THE INPUT RATING OF THE LUMINAIRE

6

WARNING - TO PREVEN WIRING DAMAGE OR ABRASION, DO NOT EXPOSE WIRING TO EDGES OF SHEET METAL OR OTHERSHARP OBJECTS.

THE RETROFIT KIT IS ACCEPTED AS A COMPONENT OF ALUMINAIRE WHERE THE SUITABILITY OF THE COMBINATION SHAL!BE DETERMINED BY AUTHORITIES HAVING JURISDICTION.PRODUCT MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN INACCOR-DANCE WITH THE APPLICABLE AND APPROPRIATE ELECTRICAL CODES, THE NSTALLA-TION GUIDE DOES NOT SUPERSEDE LOCAL OR NATIONAL REGULATIONS FOR ELECTRI-CAL INSTALLATIONS.

## WARRANTY

This product is warranted for 5 years from the date of purchase. If this product does not perform to the specifications supplied on this package, send an email to us for product return and replacement. This replacement is the sole remedy available. Liability for incidental or consecuential damage is expressly excluded.

